



Skx

**SPECIAL
UTILITY
FEATURES**


SPECIAL UTILITY FEATURES

◆ TUNE Edit Menu

This Advanced Feature Menu allows you to change the overall tuning pitch of the entire instrument. The reference pitch is "A-440". The selectable range is from "A-430" through "A-450."


To access the TUNE Edit Menu, do the following:

1. From any of the PLAY Mode screens, touch the MENU/EXIT Touch Button **once**. The Information Center Display should now look like this:

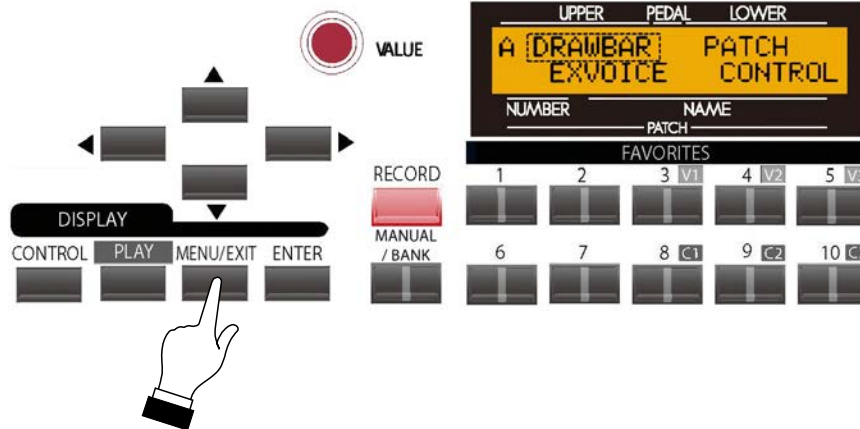


The word "DRAWBAR" should now be blinking.

2. Touch the PAGE UP Touch Button **two** times. The Information Center Display should now look like this:

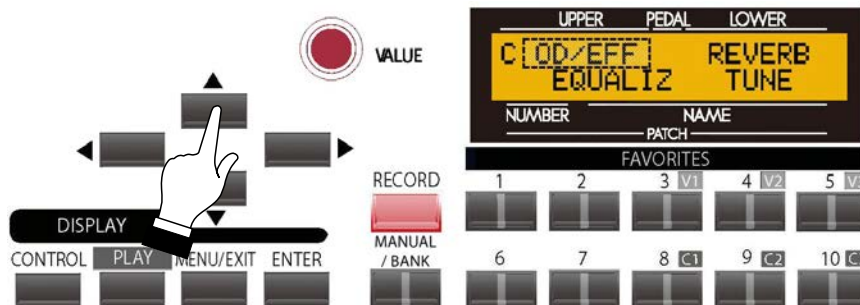


You are now in the C Edit Menu.

3. Touch the PAGE RIGHT Touch Button **three** times. The Information Center Display should now look like this:

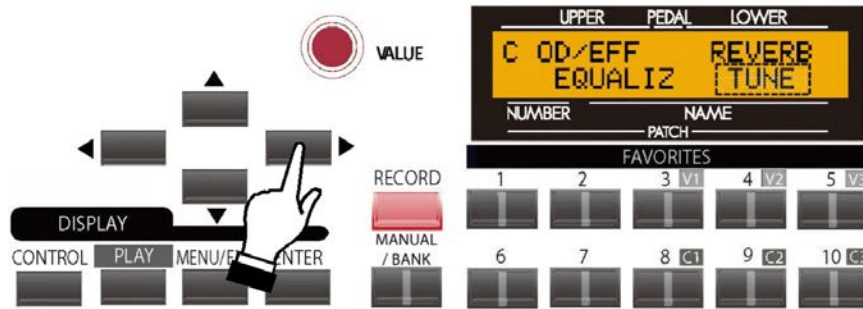

4. Now touch the ENTER Touch Button **once**. The Information Center Display should now look like this:

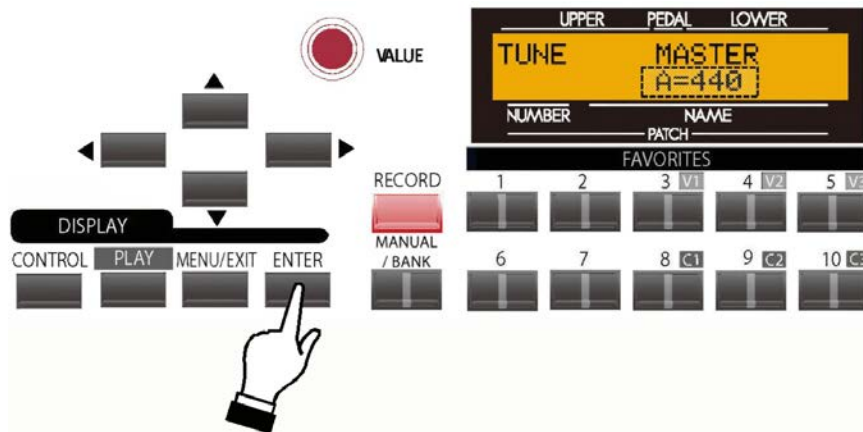

You are now in the TUNE Edit Menu.

Turn the VALUE Rotary Control to the **right** to **raise** the pitch.


Turn the VALUE Rotary Control to the **left** to **lower** the pitch.

◆ DEFAULT Edit Menu - Reset Procedure

This Advanced Feature Menu allows you to reset the **SKX** to factory-default settings.


To access the DEFAULT Edit Menu, do the following:

1. From any of the PLAY Mode screens, touch the MENU/EXIT Touch Button **once**. The Information Center Display should now look like this:

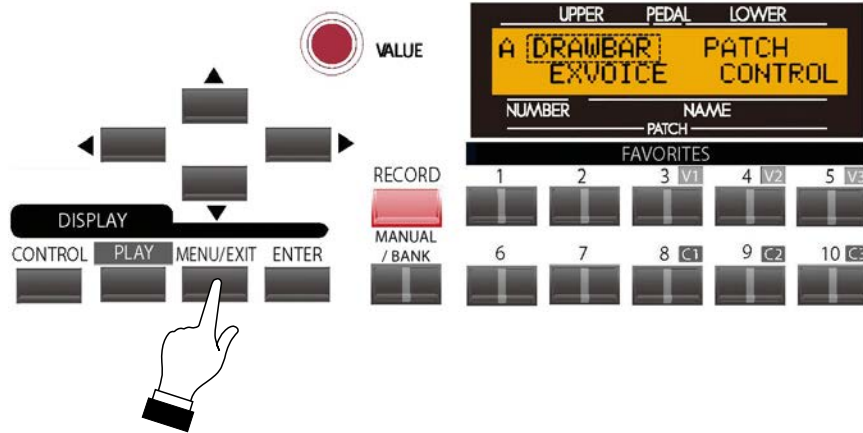


The word “DRAWBAR” should now be blinking.

2. Touch the PAGE UP Touch Button **four** times. The Information Center Display should now look like this:

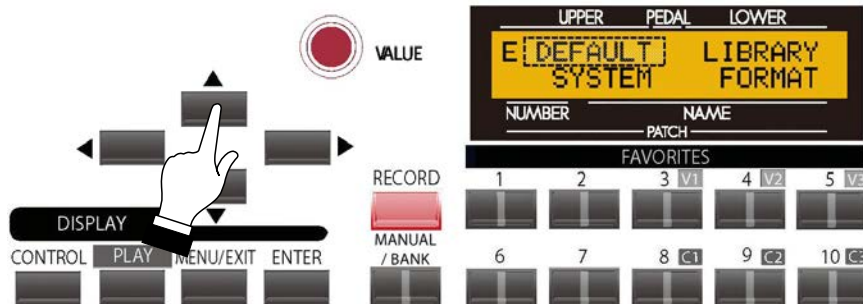

3. Now touch the ENTER Touch Button once. The Information Center Display should now look like this:

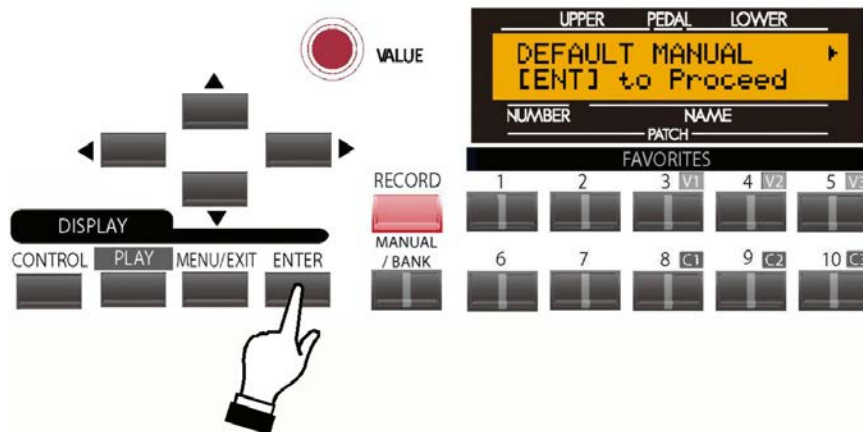

WARNING!: Doing any of the following procedures will erase all parameters, settings and registrations, returning the instrument to the original Hammond factory default settings.

Use the PAGE LEFT and PAGE RIGHT Touch Buttons to select which portions of the instrument will be reset with factory-default settings. The data chart below shows the options you may select.

DEFAULT Options	
Description	Function
MANUAL	Resets the contents of the MANUAL Touch Tab. You can use this feature to create a “clean slate” for new Patch settings.
PATCH	Resets the User Patches. Use the VALUE Rotary Control to select the Patch you want to initialize. You can select from “U001” to “U100” and “ALL” (all user patches).
GLOBAL	Resets the Global Parameters (Master Tune, Foot Switch assignments, etc.)
LESLIE	Resets the contents of the internal Leslie Cabinets. Use the VALUE Rotary Control to select the Leslie Cabinet you want to initialize. You can select from “U1” through “U8” and “ALL” (all User cabinets).
LIBRARY	Deletes all of the Extra Voice Library voices, leaving only the onboard voices.
ALL	Resets the entire instrument.

NOTE: You can also perform a DEFAULT ALL by turning the Power “ON” while pressing and holding the RECORD Touch Button.


After you have made your selection, touch the ENTER Touch Button to reset the instrument to the default settings you have chosen. If you DO NOT wish to Reset, touch either the PLAY or the MENU/EXIT Touch Button.

◆ SYSTEM Edit Menu

This Advanced Feature Menu allows you to select the Audio Mode of the instrument, and to see which version of software is installed in your **SKX**.


To access the SYSTEM Edit Menu, do the following:

1. From any of the PLAY Mode screens, touch the MENU/EXIT Touch Button once. The Information Center Display should now look like this:

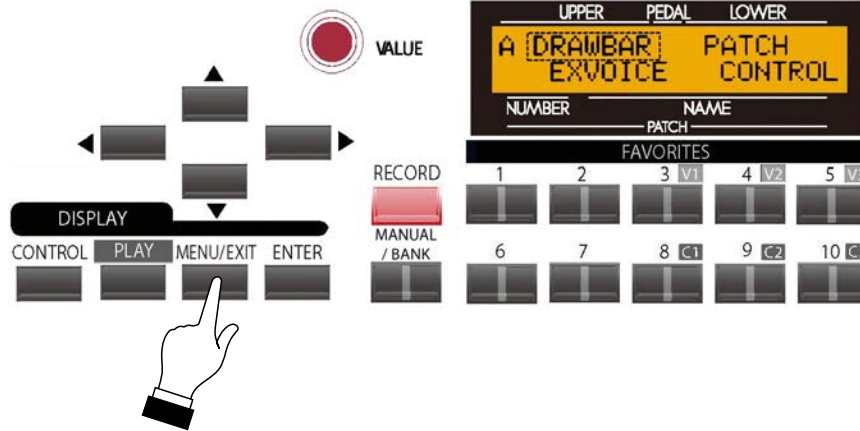


The word “DRAWBAR” should now be blinking.


2. Touch the PAGE UP Touch Button four times. The Information Center Display should now look like this:

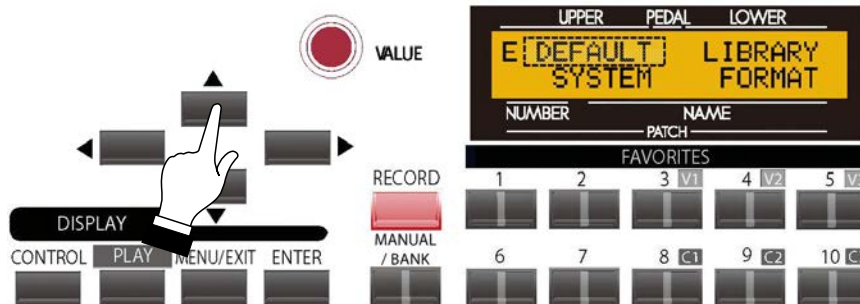

3. Touch the PAGE RIGHT Touch Button once. The word “SYSTEM” should now blink.

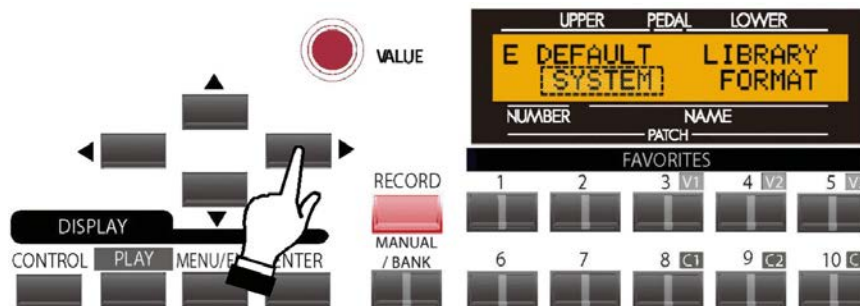

4. Now touch the ENTER Touch Button. The Information Center Display should now look like this:

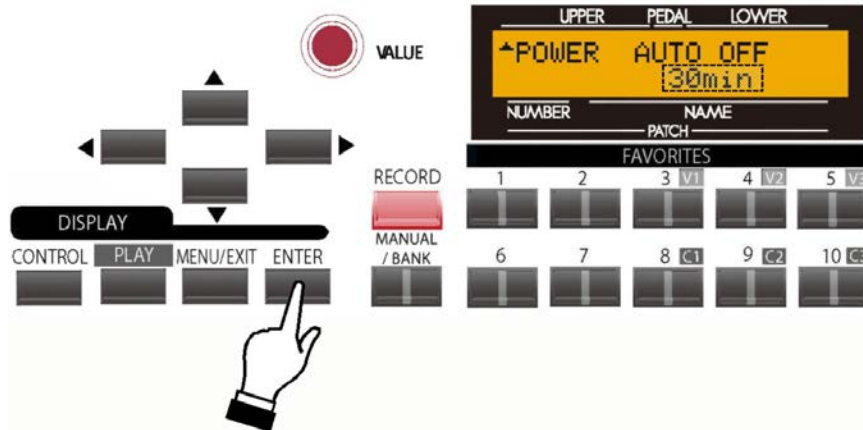


You are now in the SYSTEM Edit Menu.

Page 1 - AUTO POWER OFF

This Advanced Feature allows you to set whether the power to the instrument is automatically turned “OFF” after a certain time interval. You can select “30min” (the AC power to the instrument will turn “OFF” after 30 minutes have elapsed with no keys or buttons being pressed) or “DISABLE” (the instrument will turn “ON” or “OFF” with the AC power switch, but not turn “OFF” automatically).

From the previous screen, touch the PAGE UP Touch Button once. The Information Center Display should now look like this:

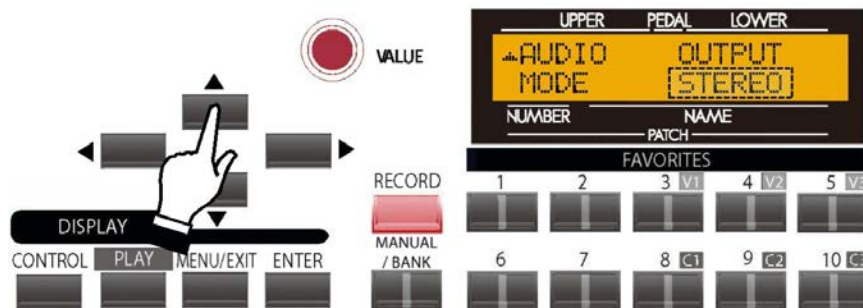


Page 2 - AUDIO OUTPUT

This Advanced Feature allows you to select the type of audio signal from the LINE OUT jacks. You can select either “MONO” (the signal is identical from both the “L” and “R” LINE OUT jacks) or “STEREO” (separate Left and Right audio signals for Stereo directionality).

Turn the VALUE Rotary Control to make your selection.

From the previous screen, touch the PAGE UP Touch Button to display Page 3 of the SYSTEM Edit Menu. The Information Center Display should now look like this:

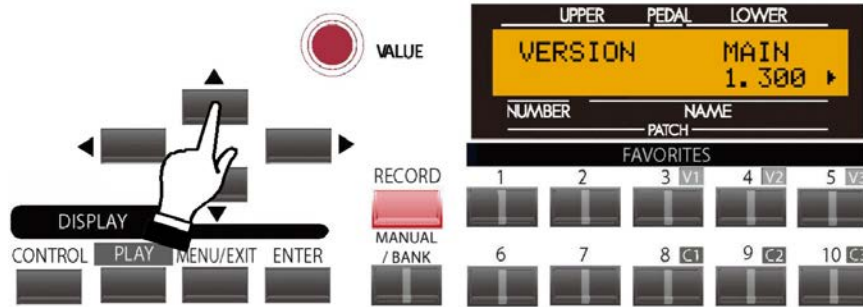

Page 3 - SOFTWARE VERSION

This Advanced Feature Menu Page allows you to see the software version of your SKX. The system software is in seven sections, which are shown in the data chart below.

The data chart below shows the options you may select.

Software Modules	
Name	Description
MAIN	Main system program
SUB	Sub-program
INFORMATION	Voice Information
DSP	Digital Signal Processor software
BOOT	Software for locating and initializing the main system program
PRESET	Factory Patches
PANEL	Control Panel interface

In addition, the Extra Voice sound file versions can be displayed. There are seven categories: “A.PIANO1,” “A.PIANO2,” “E.PIANO,” “KYBD,” “WIND,” “OTHER” and “VXJ” (the default voices for the Library).

Use the PAGE LEFT and PAGE RIGHT Touch Buttons to move back and forth among the various screens.

This page has no editing features. It is simply a series of information screens to show the version of your software.

◆ DISPLAY LOCK


This Advanced Feature allows you to put the instrument into a special playing mode whereby the Information Center Display is rendered inoperative. Touching any of the Select Touch Buttons will have no effect. This is useful if you do not want accidentally to change a parameter in the midst of playing.

TRY THIS:

1. If the instrument is “ON,” turn the power “OFF.”
2. Touch and Hold the RECORD and MANUAL Touch Tabs.



3. While holding these two Touch Buttons, turn the power to the instrument “ON.”

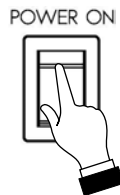

4. Continue to hold the two Touch Buttons until the Information Center Display looks like this:



5. The Information Center Display will show Drawbar settings and Preset information **only**. None of the Advanced Features may be accessed using the Touch Buttons. However, you may still record and save Patches using the RECORD Touch Button.

To restore the instrument to its normal playing mode, simply repeat steps 1 through 4 listed above. After doing so, you will be able to access the Advanced Features normally.

When the Information Center Display is **locked**:

1. The MENU/EXIT Touch Button is disabled.
2. The RECORD] button is disabled normally, but you can still record Patches.
3. The "Shortcut" functions are disabled.
4. The TRANSPOSE Touch Buttons are still enabled.
5. The EXTRA VOICE Buttons are still enabled, but the cursor is locked on the Voice Name.
6. The DRAWBAR and CONTROL Touch Buttons are still enabled, but if the Menu has 2 or more Pages, you cannot move the cursor beyond the opening Page.