

# HAMMOND

THE SOUND THE SOUL THE ONE

## HOW TO DOWNLOAD AND INSTALL CUSTOM TONEWHEEL SETS IN YOUR Sk-SERIES KEYBOARD

***N.B.: You MUST have an Sk-formatted USB FlashDrive to complete this procedure. If you do NOT have this drive, please refer to the “How To Format A USB FlashDrive On Your Hammond Sk Keyboard” video in the “How To” section of our Website.***

1. Go to [www.hammondorganco.com](http://www.hammondorganco.com)
2. Select “Support”
3. Select “Downloads
4. Go to....
5. Double-click on the Custom Tonewheel set you wish to download. This will initiate the file download to your computer.
6. Attach your Sk-Formatted USB FlashDrive to your computer
7. Copy the downloaded file(s) to the [TONEWHEEL] folder on your USB FlashDrive
8. Eject the USB FlashDrive from your Computer and attach it to your Sk Keyboard. There will be a short “handshaking” sequence while your Sk recognizes your USB FlashDrive.
9. Touch the [MENU/EXIT] button
10. Touch the [UP] Cursor Arrow ONCE to arrive at MENU PAGE B
11. “CUST. TW” will be blinking. Touch [ENTER] to arrive at the Custom Tonewheel Parameter Pages
12. Touch the [UP] Cursor Arrow ONCE to arrive at the CUSTOM NUMBER Menu Page
13. Touch the [LEFT] Cursor Arrow ONCE to arrive at the TONEWHEEL SAVE Menu Page
14. Turn the [VALUE] Knob to the left to select the Custom Tonewheel Set you desire to load.
15. Touch [ENTER] to arrive at the assignment page.

**WARNING! NORMALLY YOU WILL LOAD CUSTOM TONEWHEEL SETS TO THE BLANK USER POSITION 5. BE VERY CAREFUL TO NOT LOAD A CUSTOM SET IN POSITIONS 1-4, AS THIS MAY AFFECT MANY OTHER TONEWHEEL PRESETS.**

16. Use the [VALUE] Knob to select the proper place to install the Custom Tonewheel Set. Refer to any “ReadMe” documents or website legend which describes exactly where the Custom Tonewheel Set you have selected is intended to go. “B1-1/5” is “B-Type 1”, “B2-1/5” is “B-Type 2”, and “M1-1/5” is “Mellow”. Normally you will install the New Set in position “5”, in the appropriate Macro (B-Type 1/B-Type 2/Mellow). When you are sure you have selected the proper position, touch [ENTER]
17. Repeat for subsequent Custom Tonewheel Sets.
18. Remove your USB FlashDrive from the Sk and return it to a safe, dry place.

You have now added a fifth option in the selected Tonewheel Macro Menus. You may now select this Custom Tonewheel Set in any Drawbar Voice “U” Preset. You may also apply this (or any other) set to any “P” Preset and save it to a “U” position Preset of your choice. The Custom Tonewheel Sets remain in the onboard RAM and remain after power-off. The Custom Tonewheel Sets will also be saved in SETUP and WHOLE files, and conversely will be overwritten with the Data saved in any new SETUP/WHOLE files loaded onto the Sk.